 
 


The Kalifornia Mustang GTS 1.0 Electric Skateboard Quick Start Guide

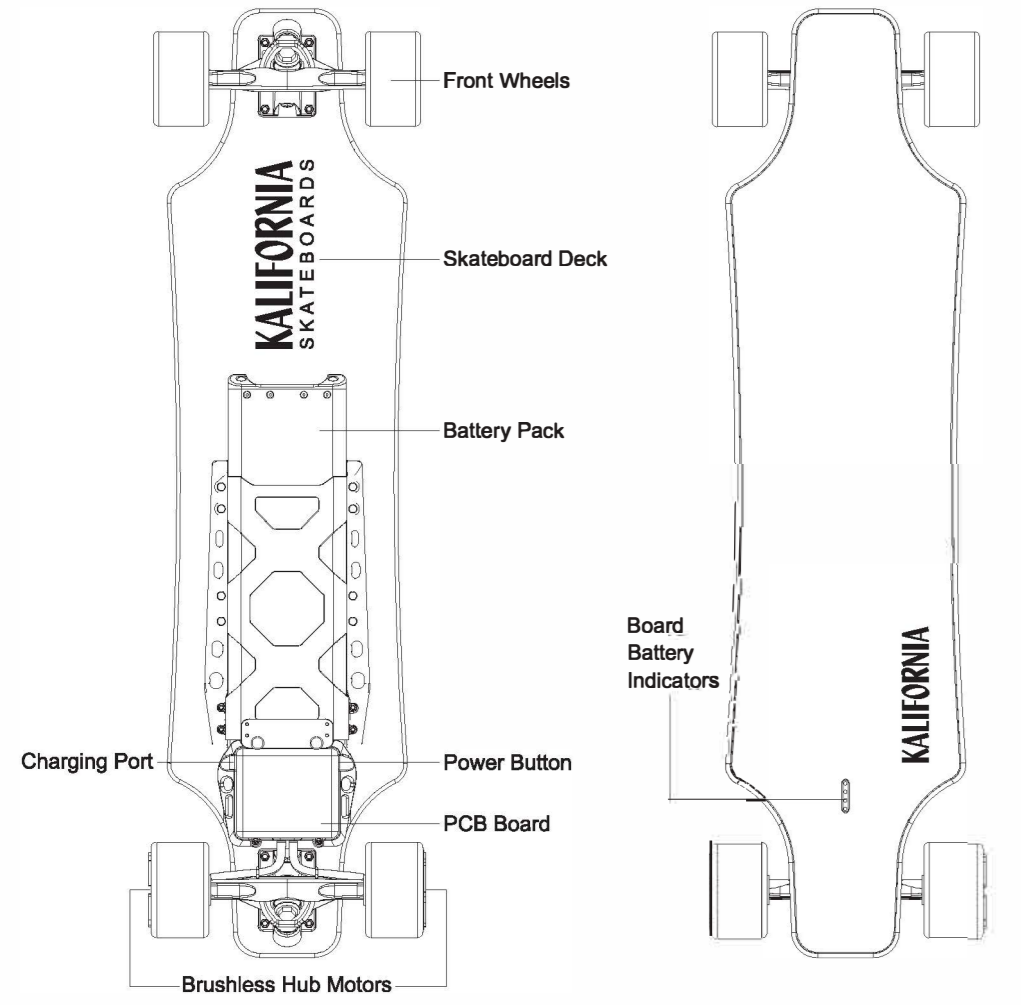


Remote Glossary

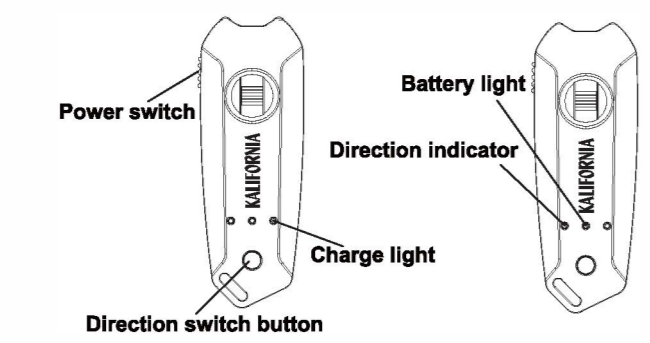

Remote Indicator LED Lights:

1. Charge indicator will light red when charging and turn off when fully charged.
2. When the remote is powered on, the Power LED will blink slowly, once paired to the skateboard the LED will blink quickly.
3. BLUE means the battery is high in charge, RED means the battery low in charge.
4. Direction indicator turns RED when reversed.


Charging The Remote

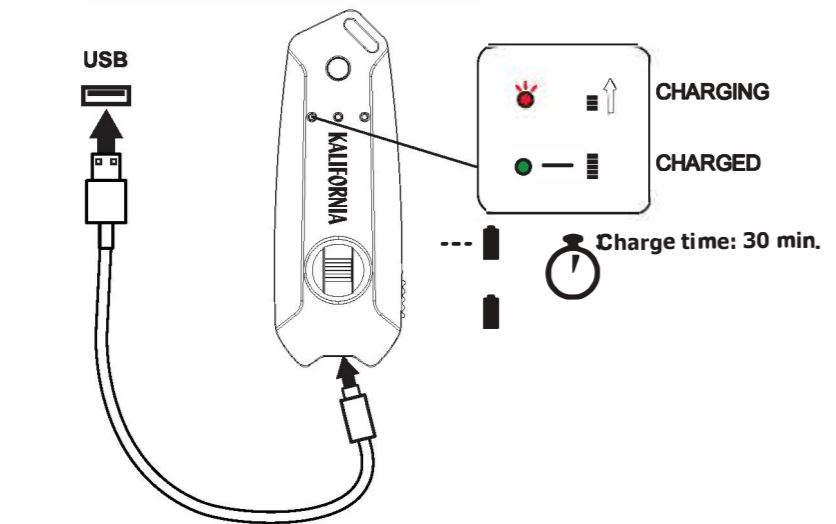

Getting Ready Ride

1. Install the battery correctly, and twist the screws
2. Turn on the Remote first and then turn on the board to connect.
3. Push Forward for acceleration, Pull Back for braking.
4. Skateboard battery indicators: 4 lights on means 100%, 3 lights on means 75%, 2 lights on means 50%, 1 light on means 20% left.

Operating the Kalifornia Mustang GTS Board With Remote

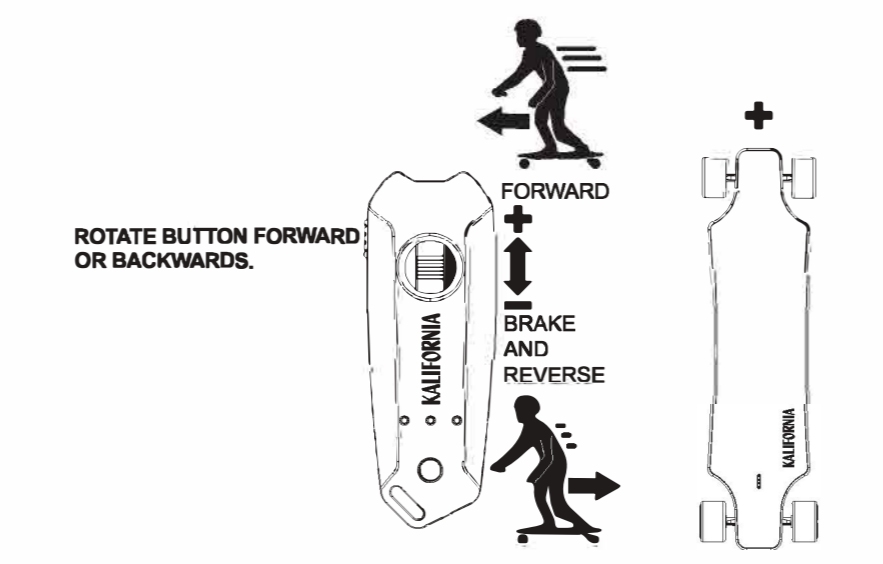

Stance

Your Kalifornia board has a lot of power. Follow these tips to ensure a safe riding experience:

- Move the button in small increments.
- Keep a wide stance on the board.
- Keep a low center of gravity.
- Lean forward when accelerating.
- Lean backwards when braking.




Tips


- ALWAYS WEAR A HELMET.
- Find an open, flat area with a clean pavement for your first ride.
- Read the warnings on the skateboard and at the beginning of this manual.
- OTHER PROTECTIVE EQUIPMENT IS HIGHLY RECOMMENDED.




AVOID THESE THINGS THAT CAN CAUSE SLIPPING:

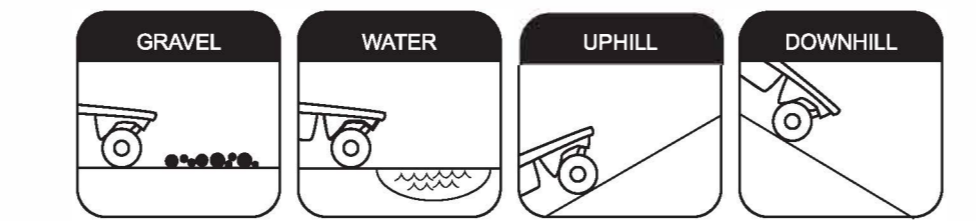

AVOID THESE THINGS THAT CAN CAUSE TRIPPING:

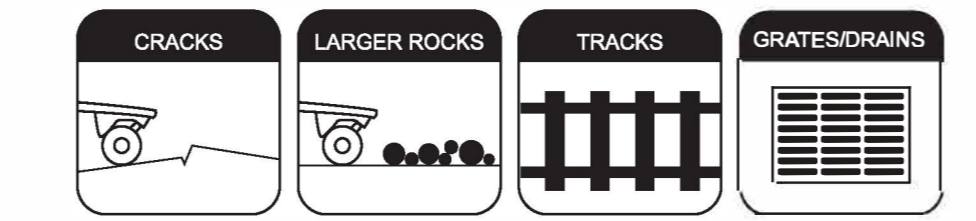

AVOID THESE THINGS THAT CAN CAUSE COLLISIONS:

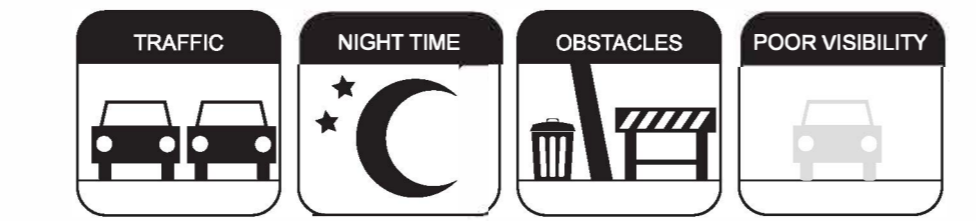

Charge the Board and Change Battery pack

The light on the charger will be RED when charging and turns to GREEN when fully charged. Change the battery pack if you ordered an extra one. Always remember to tighten the screws.

Note: If the battery is in place for a long time, it needs to be fully charged, and then replenished once a month.

Specification: Kalifornia Mustang GTS 1.0

Skateboard	N.W	16.5lbs
	size	35.4x 8.6x 5.1in
Deck	Battery Range	20-25 miles
	Hill Grade(deg)	15
Battery	Max load	270lbs
	Power	250W x 2
Motor	Capacity	36V-4300mah
	Type	18650 lithium-ion
Wheel	Weight	3.7lbs
	Charge time	2H
Remote	Charge times	1500 times
	Type	Dual Brushless Hub Motors
Charge	Max speed	20mph
	Material	PU
Charge	Size	3.5x 2in
	Harness	85A
Charge	Types	2.4 (Digital)
	Capacity	300MAH
Charge	Battery types	Lithium-ion
	Charge time	30minutes
Charge	Input	AC110V-240V
	Output	DC42V2A
Charge	Charge time	2.5H (output 2000MA)
	Certificate	UL

Daily Maintenance

1. Check the condition of the wheels to make sure they rotate freely before each ride. Check the trucks and wheels to make sure all components are firmly tightened.
2. Always store your board in a dry and ventilated location. Keep away from damp to avoid damage to PCB boards and battery.
3. Only use a Kalifornia Charger. Other uncertified chargers may cause safety issues. Always keep the Battery in a place where the temperature is less than 140 degrees Fahrenheit.
4. Charge the battery every 2-3 months when it's left unused for a long time to avoid permanent damage.
5. Fully charge the battery before you use it for the first time.
6. Keep the charging environment dry and clean, make sure the charging port is dry before each charge.
7. Never leave board unattended while charging.

Attention

1. Only use the original parts for the board to avoid safety problems.
2. Get familiar with the conditions of the brake and make sure it has perfect braking performance.
3. Oil the bearings regularly.
4. Beginners should ride the board with caution and on a smooth surface road.
5. Avoid wet and over-bumpy roads.

Packaging list

- Electric skateboard *1
- Battery *1
- User manual *1
- Charger *1
- AC power cord *1

WARRANTY

WARRANTY:

Please refer to our website kaliforniaskateboards.com for all WARRANTY terms, conditions and how to make a claim.

FOR ALL RETURN and WARRANTY SHIPPING:

Please keep your shipping box. The warranty does not include damage from shipping due to insufficient packaging.

WARNING

RISK OF DEATH OR SERIOUS INJURY

Whenever you ride a Kalifornia board, you risk death or serious injury from loss of control, collision, and falls. To ride safely you must read and follow all the warnings and instructions in the manual.

Always wear a helmet when riding. Avoid water, wet surfaces, slippery or uneven surfaces, steep hills, traffic, cracks, tracks, gravel, rocks, or any obstacles that could cause a loss of traction and cause a fall. Avoid night riding, or in areas with poor visibility, and avoid small spaces.

WARNING: Do not ride the Kalifornia board in environments, on inclines, or at speeds where you would not be safely in control of an unpowered longboard. In the event of wireless interference or a battery fault, you may need to rely on skating techniques like foot braking or sliding to stop.

WARNING: AVOID WATER!
Your Kalifornia board is not water proof. Electronics, bearings, and other components can be damaged. Water damage is not covered under the warranty.

WARNING: PINCH POINTS!
Keep fingers, hair, and clothing away from motors, wheels, and all moving parts.

WARNING: RISK OF ELECTRIC SHOCK!
Do not open or tamper with the electronics housings, which also voids the warranty.

YOUR Kalifornia: Please ride responsibly and respect those around you, both for your safety and to help promote our new sport and mode of transportation.